

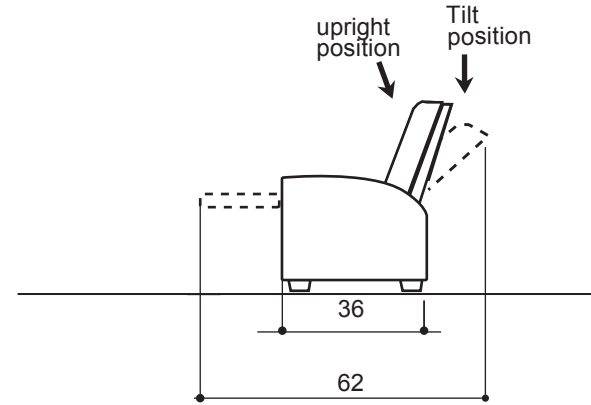








lounger detail

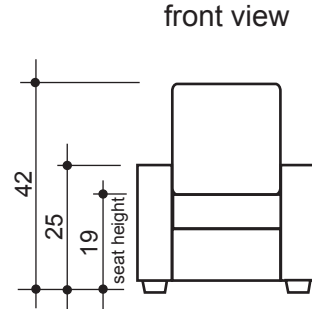

NOTE:  
Space saver require only 3" to 4"  
placement from wall for full recline

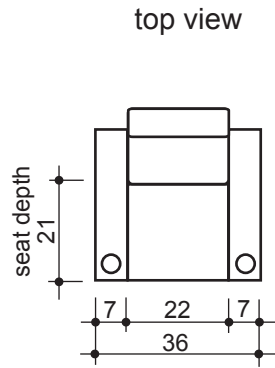

seating configuration

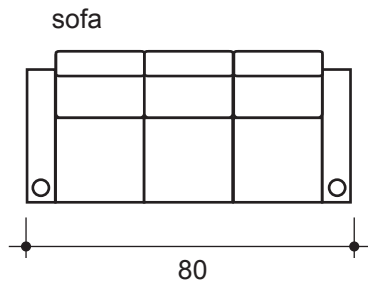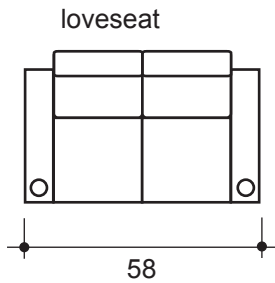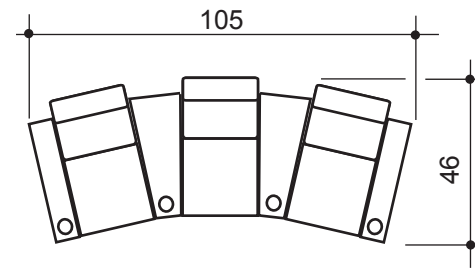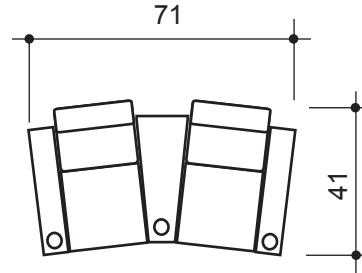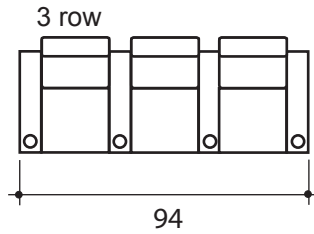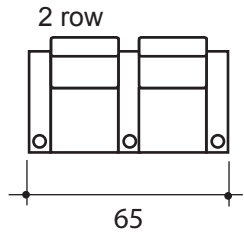

dimensions may vary slightly